

MEMPRO S6...

With Integrated Aerator Connection



Safety Precautions

- Installation, initial start-up and maintenance may only be performed by trained personnel! All applicable European and national regulations regarding installation of electrical equipment must be adhered to.
- The device may only be connected to supply power which is rated as specified in the technical data!
- The device must be disconnected from all sources of power during installation and maintenance work!
- The device may only be operated under the conditions specified in the operating instructions!

Functions Description

The MEMPRO® S6 back pressure sensor functions in accordance with the **pitot-static principle**, i.e. current fill-level is derived on the basis of hydrostatic pressure measured in a tube submerged in the liquid.

The device is adapted to tank dimensions on-site in just a matter of seconds by means of an **automatic calibration function**.

Four limit value switching points can be assigned to the filllevel range via the setup menu.

All switching points feature adjustable delay time, adjustable hysteresis and selectable NC/NO function.

The MEMPRO S6 should be connected to an optionally available vent for tank contents with widely varying temperatures, or for adhesive or outgassing media. Clock generator control is integrated into the measuring electronics.

Technical Data

Supply power:

24 V DC (20 to 30 V DC is possible)

Connected load:

Approx. 2 VA

Ambient temperature:

-20 to +60° C

Output relays:

3+1 floating limit value contacts

3 with common root

1 floating contact can be selected as a limit value contact, or as a clock generator output (can be switched back and forth between NC and NO function).

Output relay switching capacity:

250 V AC, 2.0 A / 30 V DC, 1.0 A

Caution: Contacts are not protected against overload – use

external protective device!

Terminal housing:

PBT, fibre-glass reinforced, IP 65 per EN 60 529

Terminals:

Screw terminals, max. 1.5 square mm

Measuring cell:

Ceramic diaphragm, with EPDM-sealing

Measuring accuracy:

0.5% ± 0.5 digits

Display resolution:

1%

Reset hysteresis:

Adjustable from 0 to 99%

Indicators:

2-place, 7-segment LED display

4 LEDs = limit value relays

Settinas:

Rotary switch and pushbutton

CE Mark

In accordance with low-voltage directive (73/23/ECC), EMC directive (89/336/ECC)

Maintenance

The MEMPRO® S6 back pressure sensor is maintenancefree if used for its intended purpose. If used in highly adhesive liquids (e.g. calcium suspensions), the measuring tube or hose must be inspected at regular intervals and cleaned if necessary.



IER Meß- und Regeltechnik GmbH Innstrasse 2 D-68199 Mannheim, Germany

Phone: +49 (0)621 84224-0 ◆ Fax: +49 (0)621 84224-90 e-mail: info@IER.de ◆ Internet: www.IER.de

Mechanical Installation


The MEMPRO® S6 back pressure sensor can be attached to containers and tanks in two different ways:

- With the measuring tube immersed into the tank from above
- With the measuring hose immersed into the tank from above, and with the transducer mounted in close proximity to the tank


Please observe the following points!

The bottom end of the measuring tube or measuring hose corresponds to the 0% fill-level measuring point.

The measuring tube may **not** make contact with the floor of the tank, nor may it be immersed into bottom sludge!

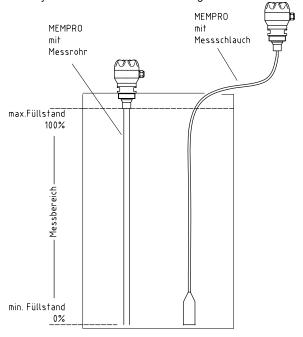

Electrical Connection

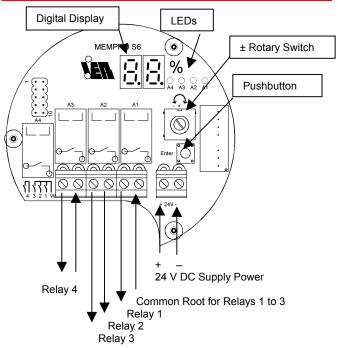

Controls

± rotary switch

The desired relay (1 through 4), is selected in menu level 1. The desired values are selected in menu levels 2 through 6.

Pushbutton:

For selecting the submenus

Output Relays A1 through A4

LED lights up = relay pulled in = contact closed

Limit Value Switching Points

Setting range: 0 to 100%

Relative to the selected 100% fill-level

Default settings: A1 = 80%, A2 = 60%, A3 = 40%, A4* = 20%

Delay Time

Adjustable from 0.1 to 10 seconds

After the selected limit value is violated, delay time is allowed to elapse and the relay is then switched.

Default setting: 0.1 seconds

Hysteresis

Setting range: 0 to 99%

The output relay is not switched back until the measured value is fallen **short of** by the selected percentage value.

Default setting: 1%

NC-NO Selection

NO = normally open = contact is **open** as long as the actual fill-level is **less** than the selected limit value.

NC = normally closed = contact is **closed** as long as the actual fill-level is **less** than the selected limit value.

Default setting: NO

Note:

All relays are open in the event of power failure.


Overranging Display

Measuring signal > mA max. value → digital display = nn Measuring signal < mA min. value → digital display = uu

Clock Generator (* for air supply control)

The aerator hose could be connected to the connection with is under the silver label. The hose connection is suitable for a PVC-hose \emptyset 4x1 mm.

Purge air pressure should not exceed a level of 2.5 bar.

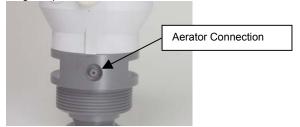

The clock controls are integrated into the electronics, and relay 4 is used to connect, for example, a solenoid valve.

Setting the clock generator:

Set <u>pump-time</u> (on-time) such that air bubbles are discharged from the **bottom** end of the measuring tube for 3 to 5 seconds (depending upon the length of the measuring tube and the air supply tube) during each pumping operation!

Off-time:

In the case of liquids which may plug the tube with sediment, pumping should be activated as required.

Measured value drift is reduced by means of frequent pumping if the liquid is subject to temperature fluctuations.

Pumping for a duration of approximately 30 seconds once or twice a day is adequate for most applications.

The clock generator is switched on as soon as on and off-time is set to a value of greater than 0.

* Setting values for **limit value** relay A4 are rendered inactive as a result.

On-Time

The contact at relay 4 remains closed as long as the selected ontime has not yet elapsed.

Setting range: 1 second to 24 hours

Available setting values:

 0^* , 1, 2, 5, 10, 30 s = **no** decimal point is illuminated 1, 2, 5, 10, 30 min. = the **right** decimal point is illuminated 1, 2, 3, 6, 12, 24 hours = the **left** decimal point is illuminated

Default setting: 0

Off-Time

The contact at relay 4 remains open as long as the selected off-time has not yet elapsed.

setting values same as above

Default setting: 0

Note:

After power failure, the device is rebooted and the program starts with on-time.

If on or off-time is changed during operation, the new on or off-time becomes immediately effective.

Initial Start-Up

Automatic setting of the 100% fill-level:

This 100% level can be adapted to on-site conditions with the help of the setup menu.

- 1 Install the MEMPRO S6 to the tank.
 - → The measuring tube may not make contact with the floor of the tank, nor may it be immersed into bottom sludge!
- 2 Fill the tank to a level of between 50 and 100% (it's best to fill the tank to the 100% level).
- 3 Switch supply power on.
- 4 Wait approximately 10 seconds until the device is ready for operation.
- 5 Press and hold the pushbutton for 3 seconds until the digital display starts blinking.
- 6 Select the actual fill-level percentage with the ± rotary switch
- 7 Press the pushbutton once again, or wait for 10 seconds until the digital display stops blinking. The device calculates the 100% fill-level and save it to

Attention!


memory.

The measuring tube or hose may not be shortened indiscriminately! It may not be any shorter than **20%** of the maximum measuring range!

| _range: | | |
|------------------------|-----------------|-------------------------------|
| Measuring Cell Type | Measuring Range | Minimum Hose / Tube Length |
| Type 1 | 0 to 1000 mm WG | 200 mm |
| Type 2 | 0 to 2500 mm WG | 500 mm |
| Type 4 | 0 to 4000 mm WG | 1000 mm |

Measuring cell type → see serial plate

 Example:



Setting Limit Value Switching Points A1 through

- Press the pushbutton once until A1 is displayed. LED A1 blinks.
- 2. Press the pushbutton once again.
- 3. Set limit value **switching point 1** with the rotary switch (0 to 100%, default setting: 80%).
- Press the pushbutton once again.
- 5. Set delay time.
- 6. Press the pushbutton once again.
- 7. Set hysteresis.
- 8. Press the pushbutton once again.
- Select NC or NO function.
- 10. Press the pushbutton once again.
- 11. Return to menu level 1.

All other values can be selected and adjusted in the same way (see "Setup Menu" graphic).

Limit value switching points A1 through A4 and the clock generator are selected in menu level 1 (press the pushbutton once) with the **± rotary switch**.

If none of the controls are activated for **more than approximately 10 seconds**, the display is returned to the current fill-level and the setting values are saved to memory.

Reset to Default Settings

Switch supply power on.

Within 3 seconds (i.e. during the test routine), press and hold the pushbutton for approximately 5 seconds:

The display counts up: 1, 2, 3, 4 ... 99, St....

→ All settings are returned to their default values

Note: The pressure sensor's **zero point** must be set first after a reset:

Remove the MEMPRO S6 or empty the tank entirely. Press and hold the pushbutton for approximately 3 seconds while in menu "t1" until the LED display "rotates".

